

# 4 PERSON ADVENTURE BACKPACK

VonShef.com

## 1000239.1 - Care Guide

**PLEASE READ ALL INSTRUCTIONS AND RETAIN FOR FUTURE USE.**

- 1. STAINLESS STEEL KNIVES/FORKS/SPOONS WITH PP HANDLE** (x4).
- 2. DINNER PLATES** (x4).
- 3. PS WINE GLASSES** (x4).
- 4. COTTON NAPKINS** (x4).
- 5. POLYESTER PICNIC BLANKET WITH PEVA WATERPROOF BACKING** (x1).



## **WARNINGS & PRECAUTIONS**

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL INVALIDATE ANY GUARANTEE.

This 4 Person Adventure Backpack is not a toy and is not suitable for children. Children should be supervised at all times around this set.

This set is intended for domestic use only and should not be used for commercial purposes.

This set contains sharp, bladed or pointed objects and small parts and components which pose a laceration or choking hazard to children and animals. Keep these parts clear from children and pets.

**WARNING!** Knives and utensils contain sharp edges which pose a serious risk of injury if used incorrectly.

Knives and utensils are not to be used by persons under the age of 18.

The Stainless Steel Knives are sharp and should always be handled with extreme care and caution. Use the handles at all times.

Supervision should be given and due care taken when using any sharp implements around children, pets and vulnerable adults. Always store out of reach.

Never run with a knife, or handle more than one knife at a time. Grasp each item firmly by the handle at all times.

Never leave knives or sharp objects unattended whilst in use or loose on any surface.

Never attempt to catch a falling knife or sharp object.

**WARNING!** Keep the Picnic Blanket away from heat sources such as BBQs and pit fires.

Ensure all straps are secured before attempting to carry the Picnic Backpack.

**WARNING!** The Picnic Backpack is not suitable for carrying hot foods or drinks unless suitably contained within an insulating flask or container.

Do not use any broken or damaged items. Serious risk of accident or injury is present when using defective items.

# CLEANING & MAINTENANCE

---

Before using your 4 Person Picnic Backpack with Picnic Blanket for the first time, remove all packaging, stickers and labels from the product and retain for future reference or store for future use.

Hand-wash all cutlery and tableware items thoroughly in warm water with a mild detergent and dry thoroughly immediately afterwards. Do not leave to air-dry.

**CAUTION:** Do not use harsh or abrasive chemical cleaners or detergents with your cutlery and tableware items as these may cause damage or deteriorate the quality. Use of metal scouring pads or similar is not recommended as these may damage the finish.

**NOTE:** The cutlery are not dishwasher-safe. Hand wash only in order to prevent tarnishing. Be advised that stainless steel exterior finishes and fixings may become dull due to the abrasive nature of some dishwasher detergents. These effects are not covered under guarantee.

**CAUTION:** The Wine Glasses are not dishwasher-safe. Wash by hand only.

After each use, thoroughly clean and dry your cutlery and tableware items as described. The Picnic Blanket can be vacuumed clean to remove crumbs or spot-cleaned to remove stains.

**CAUTION:** The Picnic Blanket is not machine-washable. Wash by hand only by dampening the fleece surface with a soft cloth and remove stain with a mild fabric washing detergent. Use a dabbing technique being careful not to rub the surface of the material too vigorously.

The Cotton Napkins can be washed by hand in slightly warm water and left to air-dry.

The insulated area of the Picnic Backpack can be wiped clean with a damp cloth and warm soapy water.

# CUSTOMER SERVICES

---

If you are having difficulty using your product and require support, please contact [support@vonhaus.com](mailto:support@vonhaus.com)

# DISPOSAL INFORMATION

---

Please recycle where facilities exist. Check with your local authority for recycling advice.

# WARRANTY

---

To register your product and find out if you qualify for a free extended warranty, go to:

**[www.VonShef.com/warranty](http://www.VonShef.com/warranty)**

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in this manual and all instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring this appliance second-hand or for commercial or communal use.

# COPYRIGHT

---

All material in this instruction manual are copyrighted by DOMU Brands Ltd.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank you for purchasing the 4 Person Adventure Backpack.

VonShef® is a registered trademark of DOMU Brands Ltd  
Made in China for DOMU Brands Ltd M24 2RW.