



POTATO RICER

Product Instructions

Product No. 1507101.1

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.


SCAN ME



Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Parts List

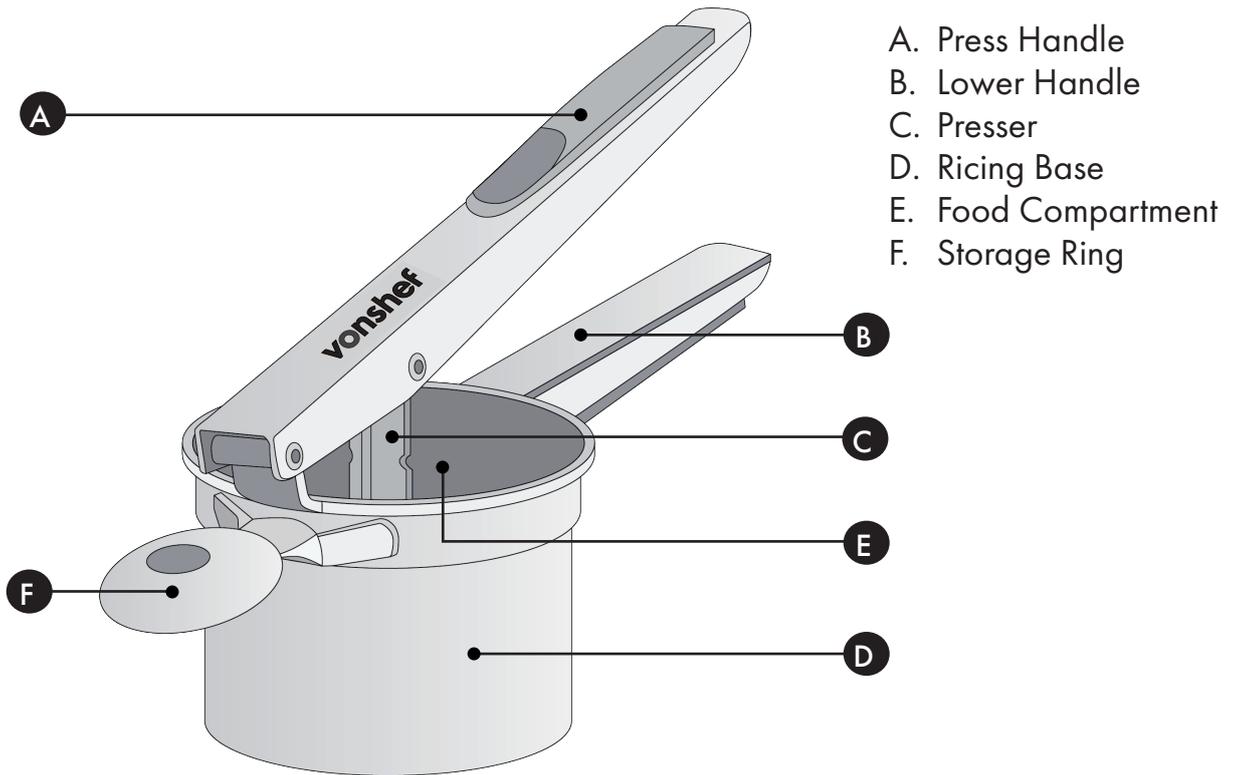

Information

Useage

1. Open the Potato Ricer fully and position your partially boiled (softened), sliced fruit or vegetables into the **FOOD COMPARTMENT**.
2. **IMPORTANT:** Ensure all skins have been peeled and any pips or seeds have been removed before inserting fruit or veg into the **FOOD COMPARTMENT**.
3. Pull the **PRESSER** down on top of the fruit or veg using the **PRESSER HANDLE**.
4. Hold the Potato Ricer over a container or bowl (not supplied) to ensure all of the riced fruit or veg is collected.
5. Holding the **LOWER HANDLE** with one hand, firmly grasp the **PRESS HANDLE** with your other hand and squeeze the 2 **HANDLES** together.
6. With the fruit or veg softened sufficiently, the contents will emerge smoothly from the bottom of the **RICING BASE**.
7. Repeat this process for the required amount of riced fruit or veg.

Cleaning and Maintenance

The Potato Ricer is dishwasher-safe. It is, however, recommend to wash by hand to protect the finish. Wash in warm soapy water with mild detergent and gently scrub using a soft sponge. **CAUTION:** Avoid using any abrasive cleaning materials to clean the Potato Ricer as this may damage the stainless steel surface.

Salt spots, tarnishing and stains can be removed using mild detergents specially formulated for cleaning metalware and similar items.

Stubborn stains can be removed using a suitable non-metallic scouring pad.

Dry thoroughly using a soft dry cloth or paper towel.

Store in a cool dry area out of reach of children. **IMPORTANT:** Do not store food inside the product.

Metal Care Guide

Before First Use

- Before using your metalware for the first time, remove all packaging, stickers and labels from the product and store or dispose of safely.
- Wash all metalware items thoroughly in warm, clean, soapy water with a soft cloth and mild detergent. Dry thoroughly using a clean, dry cloth or paper towel.
- Never allow your metalware to air-dry naturally as this can tarnish the surface.

Important Care & Use

Your metalware is suitable for use in a dishwasher.

Your metalware is NOT suitable for oven use.

Your metalware is NOT suitable for use in microwave ovens.

Your metalware is NOT suitable for deep or shallow frying.

- NEVER handle hot metalware. ALWAYS use a suitable heat-resistant oven glove, grasping the metalware firmly by the handle(s) where possible.
- NEVER subject metalware to sudden temperature changes as this will damage your metalware.
- NEVER use sharp or metal utensils, knives or implements with your metalware.
- To protect your metalware, we recommend using silicone, heat-resistant plastic or wooden tools.
- Sharp knocks, impact or dropping your metalware can cause damage. Do not use damaged metalware.

Cleaning & Storage

ALWAYS wash your metalware after each use. Wash in warm, clean, soapy water with a mild detergent and soft sponge. Dry thoroughly afterwards.

NEVER use the metalware to store food. Residue, salts, sugars and acids released by food can damage your metalware.

ALWAYS allow the metalware to cool fully before attempting any cleaning or storage.

Do not immerse in, or fill with, cold water when hot.

DO NOT use any metal, harsh abrasive or very stiff pads/washing up brushes, or abrasive cleaning agents on ANY of the surfaces.

Stubborn stains can be removed using a suitable non-metallic scouring pad.

Salt spots, tarnishing and stains can be removed using mild detergents specially formulated for cleaning metalware and similar items. Wash your metalware thoroughly after use of such products.

It is recommended that you place a paper towel between metalware if stacking to prevent damage to the surfaces.



Dishwasher Safe



Materials
Approved for
Food Use

Information

Disposal Information

Please recycle where facilities exist. Check with your local authority for recycling advice.

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonshef is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

EU Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

