

Cupcake Carrier

Product No. 1507550.1 / 1507551.1 / 1507214.1

Important Safety Notice

This product is not suitable for use by children or by individuals with physical, sensory, or mental impairments that may limit their ability to operate the equipment safely, unless they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following all safety instructions provided in this manual.

Before First Use

Remove all packaging, stickers and labels from the product and store or dispose of safely. Always check the product for any signs of damage before use. Do not use if damaged.

Wash thoroughly in warm, clean, soapy water with a soft cloth and mild detergent. Dry thoroughly using a clean, dry cloth or paper towel.

General Safety

This Product is not suitable for use in microwaves, ovens. Unless stated otherwise at the point of sale.

Always ensure any lids are secure (where applicable). Do not invert.

CAUTION: The storage/carry box are not heat-resistant. Exposing your items to high temperatures can cause permanent damage. Do not rest hot cookware on the Containers. Never place any of the containers on a direct heat source such as a hob, open flame or any heating elements.

WARNING! DO NOT place the storage/carry box inside microwaves or ovens.

Certain foods with strong colours or flavours can cause staining to the storage/carry box that can be difficult to remove. Clean the containers immediately after use, following the above guidelines, to preserve the finish.

Ensure the shelves and lid are securely locked into place before storing and carrying your food items.

DO NOT overload the boxes.

Cleaning & Maintenance

To remove any unpleasant stains and odours, make a thick paste of warm water and baking soda. Simply rub the mixture inside the storage/carry box and allow to sit for at least a day. Rinse out thoroughly.



Materials approved for food use



Dishwasher safe

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonshef is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

